



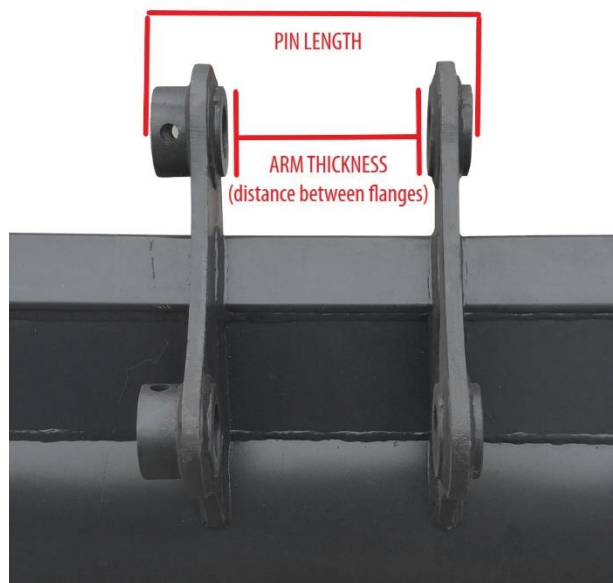

THE DIMENSIONS YOU NEED TO KNOW

To find out if our buckets can be fitted your excavator,
you must check these dimensions:

- 1- PIN DIAMETER
- 2- ARM THICKNESS (distance between flanges)
- 3- INTERAXLE (distance between pins)
- 4- PIN LENGTH

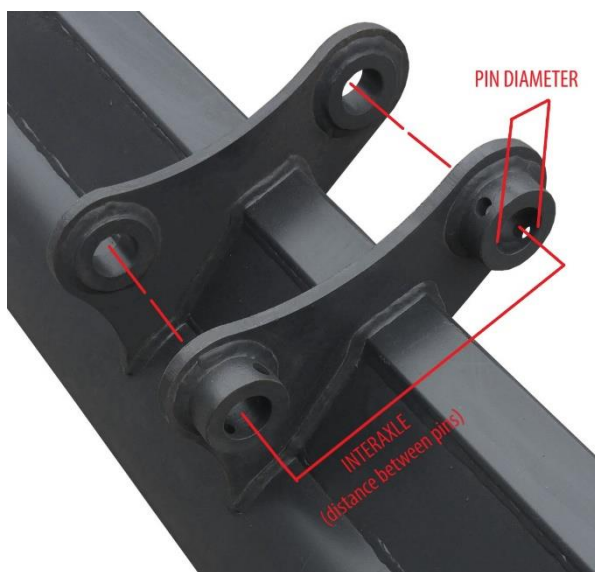

If arm is shorter, we have spacers to reduce the difference.
In addition we have always in stock bucket pins with grease
valve, exactly cut for our buckets

